

JM

JACKMANTECH

USER MANUAL



HEVRO TEMPLE

Thank you for choosing our product!

Our machines have been designed in such way, that their use and possible service won't cause problems even for unskilled staff. We have made every effort to ensure that our devices are safe to use. Nevertheless, everyone should familiarize themselves with our short instruction that will allow to safely install and use our machines.

Table of contents.

Important Safety Instructions	3
1. GAME BOARD SETTING	4
2. CONSOLE SETTING.....	7

Important Safety Instructions

WARNING:

Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage.

- Read and follow these instructions to use your Video Amusement Game safely.
- All metal parts are connected together and the machine must be plugged into the socket with earthing AC 230 V 50 Hz.(or 110 V for US version)
- Do not use this apparatus near water.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs and at the point where they exit from the apparatus.
- Protect power cord from exposure to liquids and moisture.
- Refer all servicing to qualified service personnel.
- Tampering with electronic components while machine is switched on may cause electric shock, injury or death.

WARNING:

Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage.

- Unless proper precautions are used by a qualified personnel, machine should be switched off while service area is accessed.
- Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- This apparatus has an on/off switch. To disconnect this apparatus from power, you must turn off the machine and disconnect the power cord.
- Make sure the power cord is always easily accessible.
- The Video Amusement Game is for indoor use only.

1. GAME BOARD SETTING

 
To enter settings mode on the game board use the small board inside to navigate:

1. LEFT
2. UP
3. DOWN
4. RIGHT
5. ENTER/EXIT
6. SELECT



Enter setting mode by pressing ENTER (5) for 5 seconds.

SETTINGS:

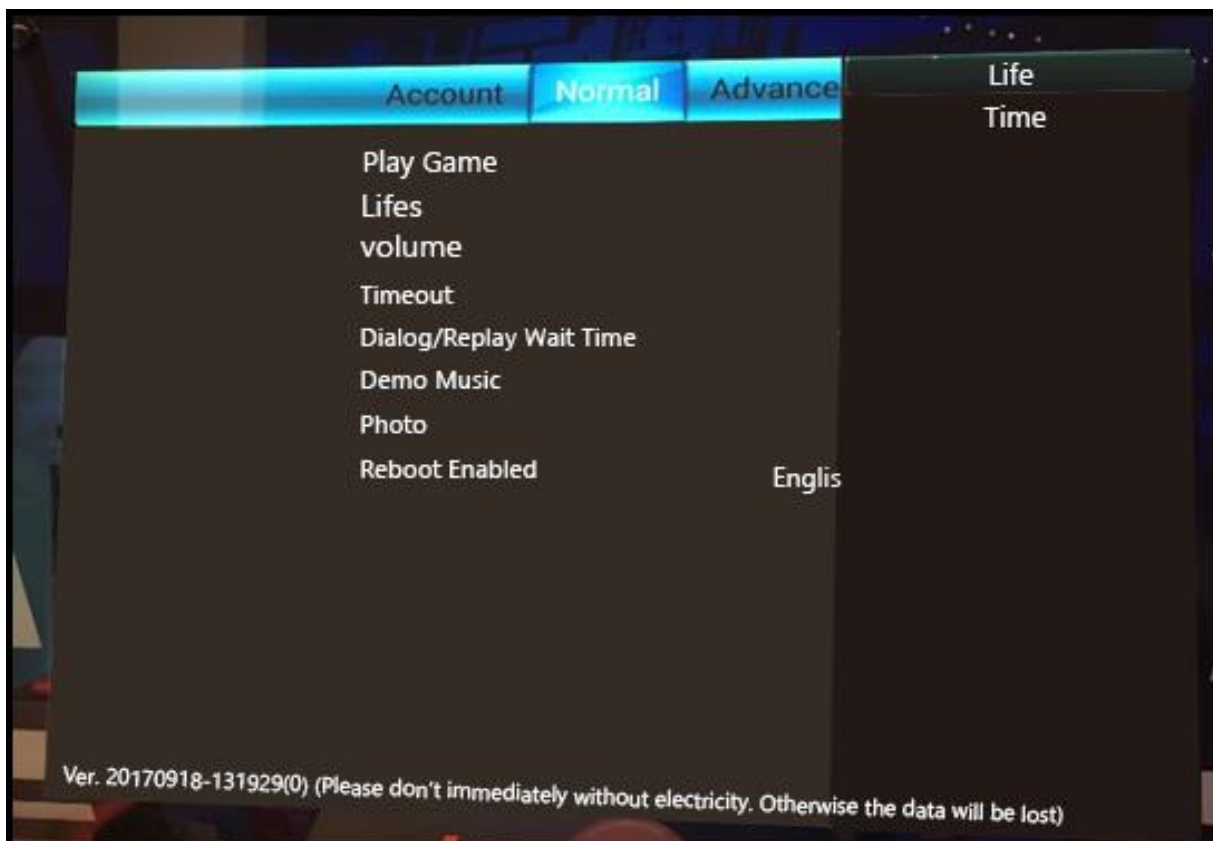

1. PLAY GAME

 
1. LIFE: recommended option by producent - player is finishing game after loosing 3 (or another value) lives. Total time of the game is dependent on a player.

TIME

you can set up for player to have unlimited number of lives, and the game will stop after certain amount of time.

2. LIFES

If you have chosen a play mode "life" adjust here number of lives you wish to give every player that will start the game after inserting the coin

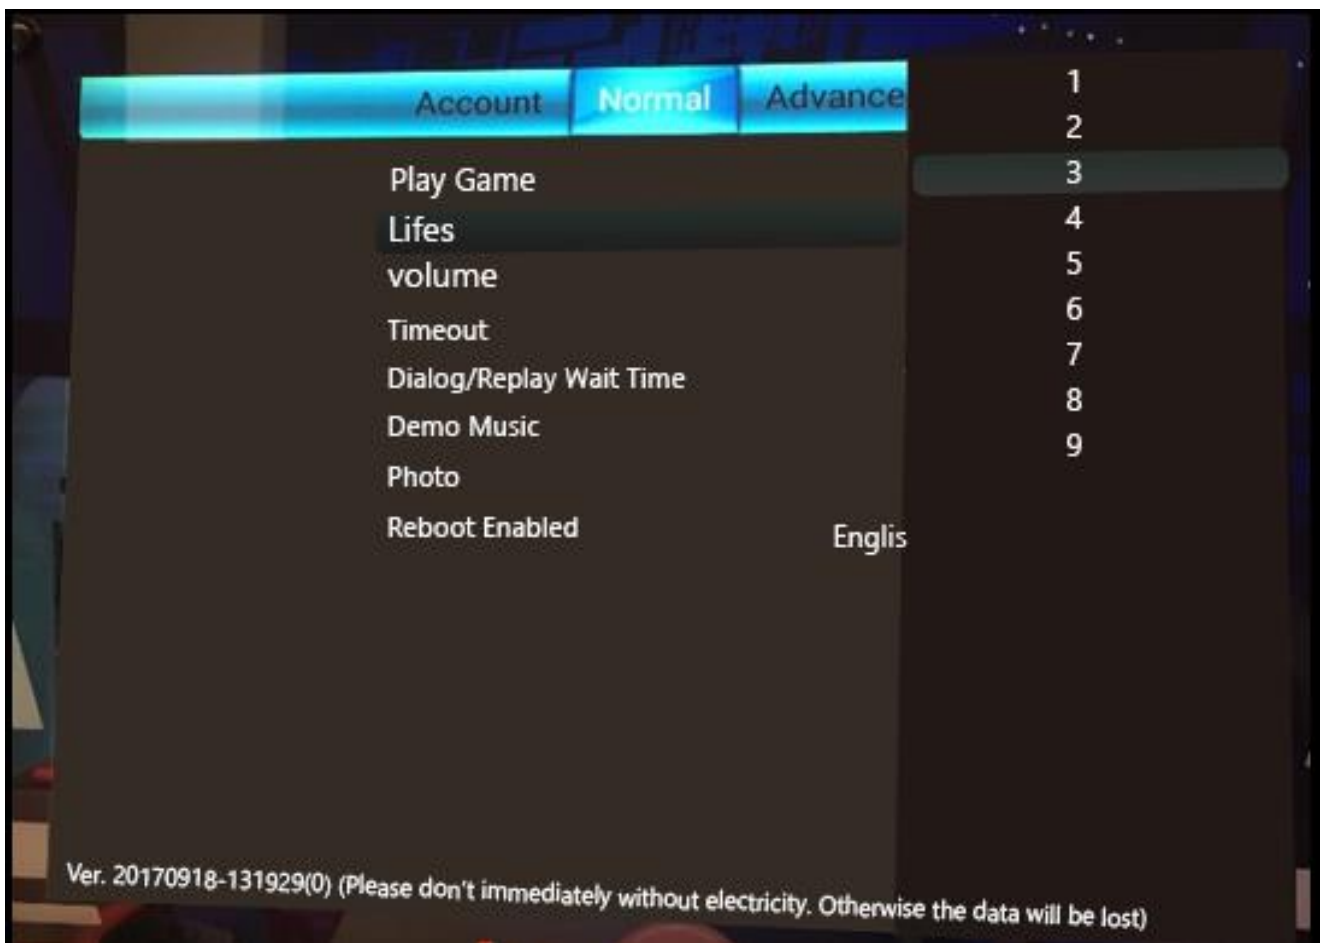

Choose desired number of lives (from 1 to 10) player has in a game - recommended value is 3.

3. VOLUME

Volume of the game is entirely set in JM Operator Box.

4. TIMEOUT

If you have chosen a play mode "time" adjust here time (in minutes) you wish to give every player that will start the game after inserting the coin

5. DIALOG/REPLAY WAIT TIME

adjust time (in seconds) that next coin should be inserted to continue playing the same game and keep collecting the score. Choose time between 5 and 60 seconds; recommended 10 seconds)

6. DEMO MUSIC

original setting of the machine is ON; music and it's volume is regulated in JM Operator Box

7. PHOTO

not apply



2. CONSOLE SETTING



TOP BUTTON – refresh mode, press it once you finished setting the machine

BOTTOM LEFT – decrease value / go down

BOTTOM CENTRE – go to MENU / confirm

BOTTOM RIGHT – increase value / go up

1. COUNTERS



1.1 COLLECTIONS MACHINE

(process of taking out the money from the machine)



- the list of the employees entitled to cash collection will appear



- choose the name of the employee (to confirm press MENU button)



- choose YES/NO (when choosing YES, data will be send to the application; process takes up to 15 seconds)

 


- amount of money machine has collected since last money collection will be displayed on the screen



- press MENU button to come back to main menu

1.2 ACTUAL COINS

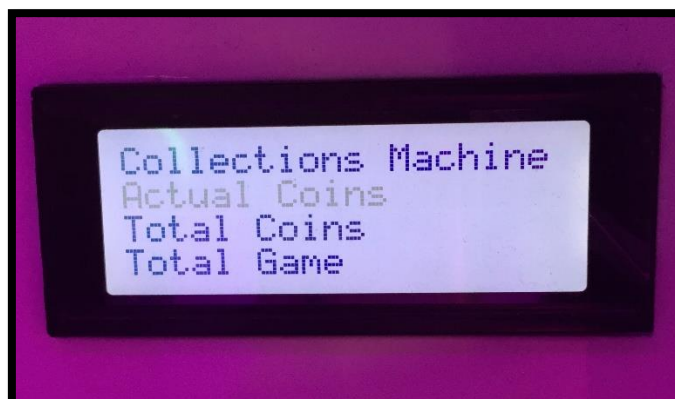

(actual amount of money in the collector box at the moment; if the money has just been collected amount will be 0.00)



 
1.3 TOTAL COINS



(amount of money machine has collected since the beginning of creation)



1.4 TOTAL GAMES

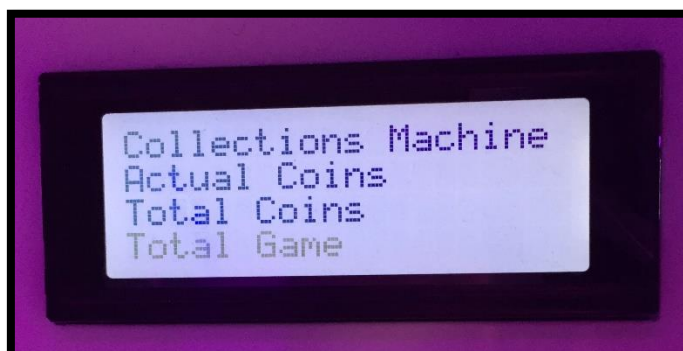

(number of games machine has played since the beginning of creation)



2. SETUP MACHINE



2.1 REFRESH DATA



(any data that was set up, changed or adjusted will be loaded onto the game from JM Operator/to JM Operator after pressing chosen button; process takes up to 15 seconds)



2.2 VOLUME



- NO CREDIT (volume of machine when it is not in use)



- GAME (volume of machine during game played)



- PRESENTATION (volume of machine during presentation – after setting up the time, every couple of minutes machine turns on and plays short sequence that invites people to use the machine)



2.3 TIME



- PRESENTATION (change time; period of time in minutes machine will turn on every x minutes and play a short sequence that invites people to use the machine)



- GAME LED (change time; period of time after machine received money for LED lights to return to its original state – duration of the LED sequence)



2.4 MONEY



- COIN 1 (process of changing the coin acceptor)



Each of the channels has been programmed for different coin.

Channel 1 (EDIT) – how many coins (and of which kind) has to be inserted to play 1 game; there are 7 channels for possible set-up

 


- BILL/BANK 1 (process of changing the bill acceptor – ONLY APPLIES IF THERE IS PRICE BOX ATTACHED TO THE MACHINE)
- COIN 2 – not apply
- BILL/BANK 2 – not apply
- FREEPLAY OFF/ON (after changing basic front coin acceptor for front coin acceptor with a button)



After choosing ON, FREEPLAY mode will be activated - machine will play games without receiving any money

2.5 TICKET/GIFT

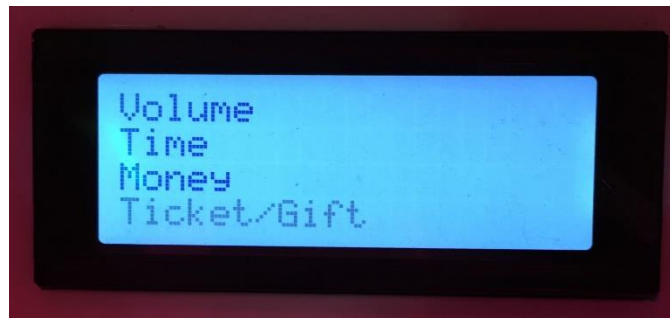

- GAME BOARD OFF/ON (after pressing ON settings from the game board will apply to the device)



- MANUAL OPTION: 1 game - .. tickets (choose the number of tickets the player will receive after 1 game played)

2.6 PASSWORD (NOT APPLY)

3. TEST MACHINE



3.1 TEST COIN AND BILL ACCEPTOR



After inserting a coin, machine reads the coin and displays the value of it on the screen



(PLEASE NOTE that the coin put inside during the TEST is not changing "TOTAL COINS" and "ACTUAL COINS" value of the machine – is not accountable)

3.2 TEST GAME



After choosing this option, 1 credit will be added automatically and the game will be played. Choose this option for checking the functionality of the game, buttons and all the parts involved (PLEASE NOTE that this credit will not be accountable to "TOTAL GAMES" value)



3.3 TEST TICKET

 


(not apply to the machines without the price box)

3.4 TEST LED



After choosing this option, each and every LED light will be turned ON and checked for proper functionality in 3 colors

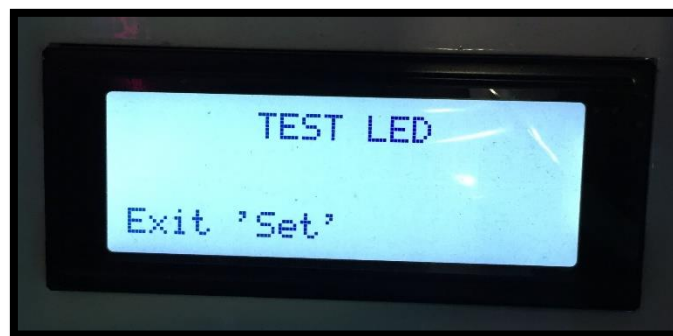

3.5 INFO



- OWNER (displays information about the owner of the machine)





- JM MASTER (displays serial number and software version of the master)



- JM CONSOLE (displays serial number and software version of the console)





- JM ID1



- JM ID2





- SET MACHINE (displays serial number, name and color of the machine)



- BATTERY CONSOLE (displays voltage, condition and charging level of the battery in volts)

